


Focke-Wulf Fw 190 A-5, 10./NJG 3

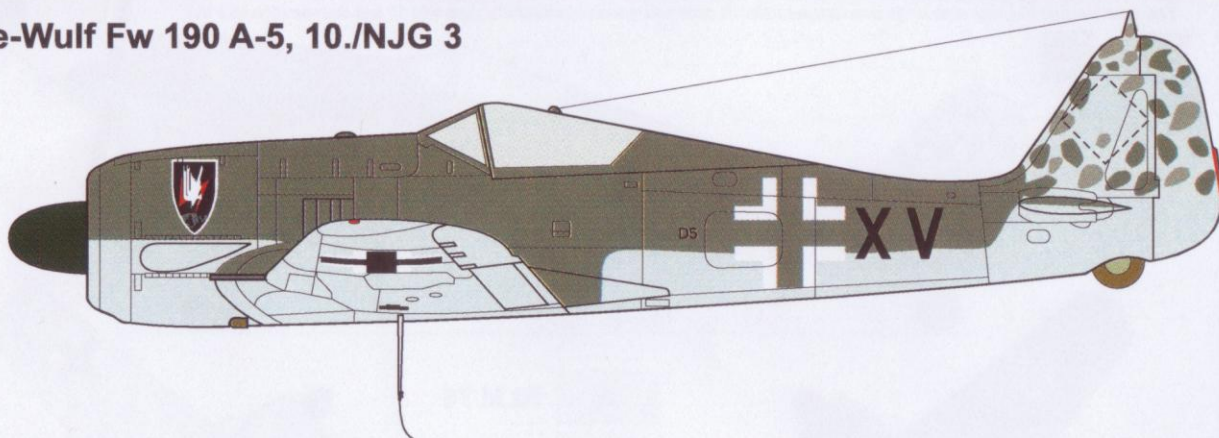

Messerschmitt Bf 109 G-6/R6, 2./JG 300, Ofw. Arnold Döring



NÁVOD NA APLIKACI VODOU SNÍMATELNÝCH OBTISKŮ
HOW TO APPLY DECALS

1. Vystřihněte pečlivě vybranou část z obtiskového aršíku.
2. Ponořte ji na 10 vteřin do vlažné vody a počkejte, až podkladový papír nasaje dostatečně vodu.
3. Odložte navlhčený obtisk na nesavý podklad a nechte působit asi 1 minutu, než se uvolní lepidlo a je možno obtiskem po podkladovém papíru lehce posouvat.
4. Přiložte obtisk i s podkladovým papírem na požadované místo na modelu. Lehce přidržeťte obtisk pinzetou a opatrně z pod něj vytáhněte podkladový papír. Pokud se Vám nepodaří umístit obtisk přesně na požadované místo, navlhčete štětcem okraje obtisku trochou vody. Voda zavzlíná pod obtisk a můžete pak znovu upravit polohu obtisku na modelu.
5. Je-li obtisk na určeném místě, opatrně ho přitiskněte jemným hadříkem tak, abyste vytlačili všechnu přebytečnou vodu a případné nežádoucí vzduchové bubliny.
6. Po aplikaci nechte obtisk řádně zaschnout.
7. Pro sjednocení povrchu modelu a zamezení případného pozdějšího odlepování obtisků doporučujeme celý povrch přelakovat vhodným průhledným lakem.

1. Cut out the needed detail from the sheet
2. Submerge the decal completely in lukewarm water for 10sec.
3. Put the wet decal on-plotting base and allow it soften completely
4. Place the decal together with the base paper on the model. Keep the decal by tweezers and remove the base paper carefully. In case that the decal was placed incorrectly, add water with a brush on the border of the decal. The position of the decal can be corrected then.
5. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
6. Allow the decal dry well.
7. It is recommended to spray the surface of the model with a coat of transparent varnish to achieve consistent surface and to avoid unsticking of decals.

POUŽITÁ LITERATURA
REFERENCES

J-Y Lorant, R Goyat - Jagdgeschwader JG 300 Wilde Sau
David P. Williams - Luftwaffe colours (Nachtjäger part two)

Pozn.: Všechny odstíny jsou pouze informativní!


Note: All colour shades are only for your information!

Focke Wulf Fw 190 A 5, D5+XV, 10./NJG 5, základna Aalborg-West počátek roku 1943.

Tento Fw 190 původně náležel 10./JG 11 odkud byl zapůjčen společně ve dvěma Fw 190 A-4 s kódovým označením D5+YV a D5+YV pro noční stíhání civilích Mosquit létajících mezi Skotskem a Švédskem. Toto stíhání nemělo očekávané výsledky a proto byly letouny A-4 vráceny zpět v únoru a A-5 v březnu 1944. Letoun měl horní a boční plochy přestříkány barvou RLM 74 a vyzbrojen dvěma kulomety MG 17 a dvěma kanony MG 151.


Focke Wulf Fw 190 A 5, kód D5+XV, 10./NJG 5, Aalborg-West air base, early 1944.


This Fw 190 loaned with two Fw 190 A-4 koded D5+YV and D5+YV for night fighting civil Mosquitoes were flying between Scotland and Sweden. However, trials did not result in the expected succeted and Fw 190 A-4 were returned to JG 11 in February 1944 and A-5 was returned in March. This machine had fuselage and wings oversprayed RLM 74 color and armed two machine guns MG 17 and two cannons MG 151.

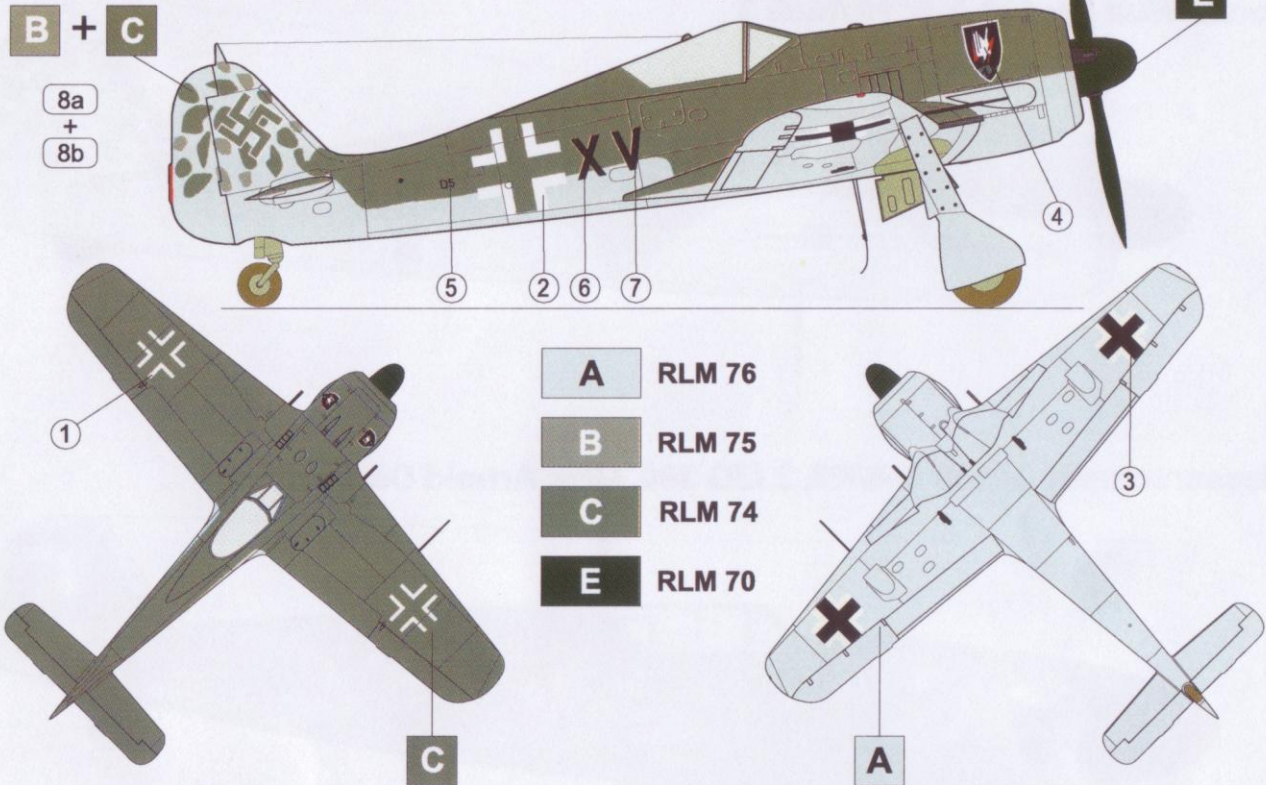

Messerschmitt Bf 109 G-6/R6, červená 6, Ofw. Arnold Döring, 2./JG 300, Bonn Hangelar, říjen listopad 1943. Ofw. Döring získal celkem 23 sestřelů, z toho 13 v noci. První tři noční sestřely získal na He 111 u 8./KG 55 na východní frontě. Je držitelem RK.

Messerschmitt Bf 109 G-6/R6, red 6, Ofw. Arnold Döring, 2./JG 300, Bonn Hangelar, October November 1943. Ofw. Döring achieved total 23 victories including 13 in the night. The first three night victories reached with He 111 in 8./KG 55 on Eastern Front. He was Knight Cross holder.

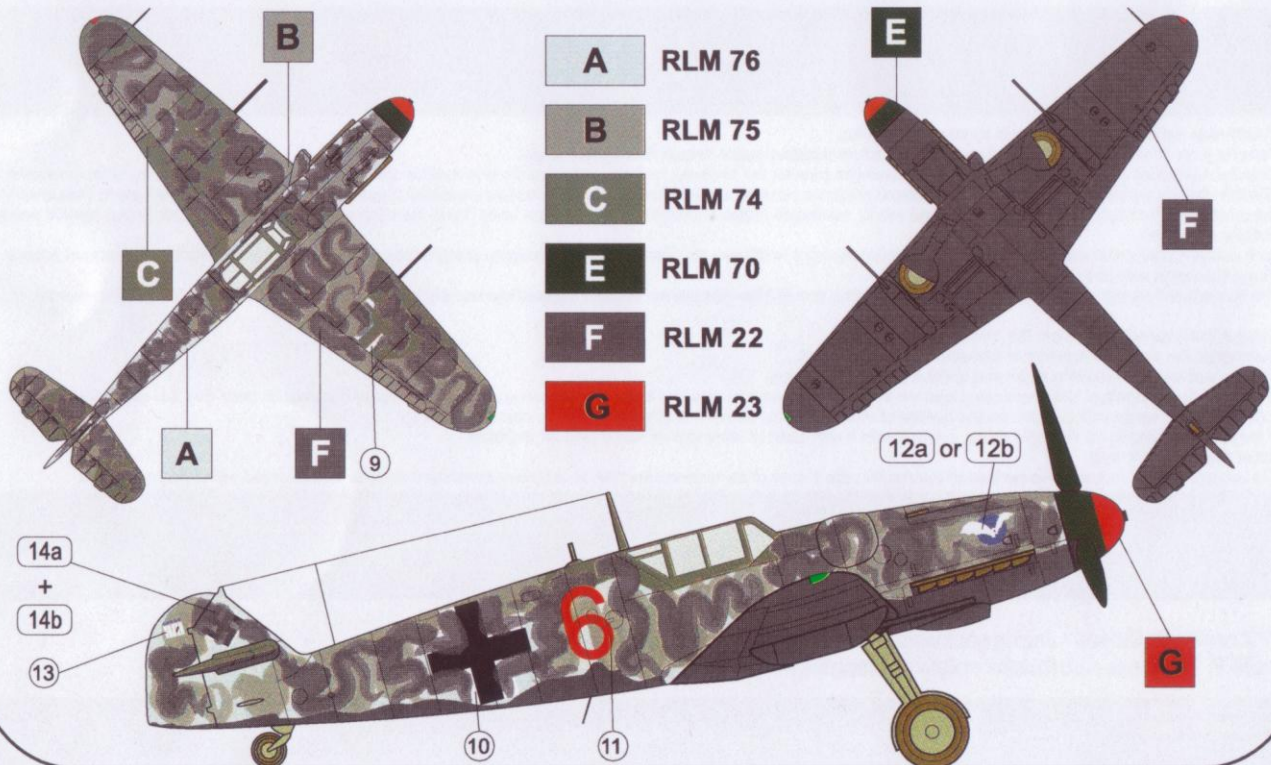

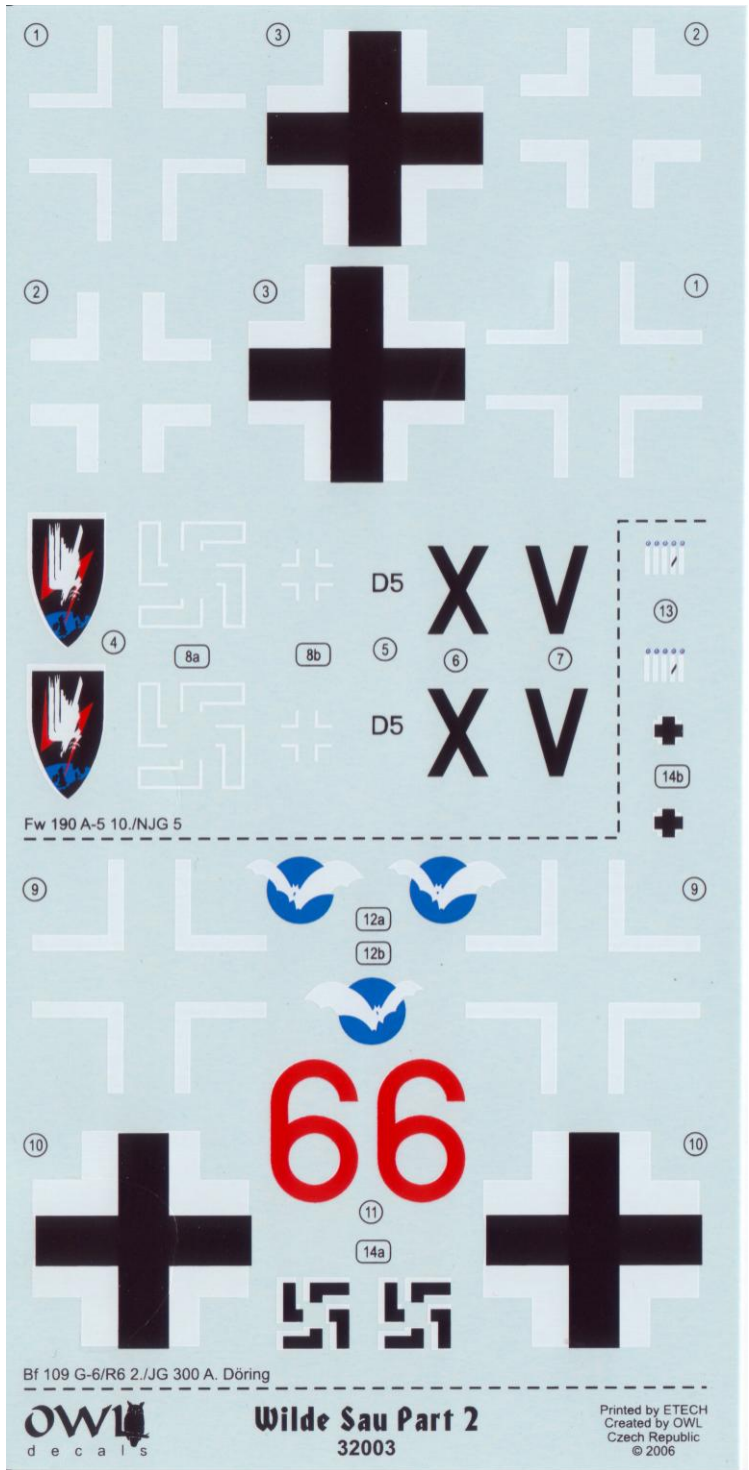

OWL
d e c a l s

Wilde Sau Part 2
32003

Printed by ETECH
Created by OWL
Czech Republic
© 2006