


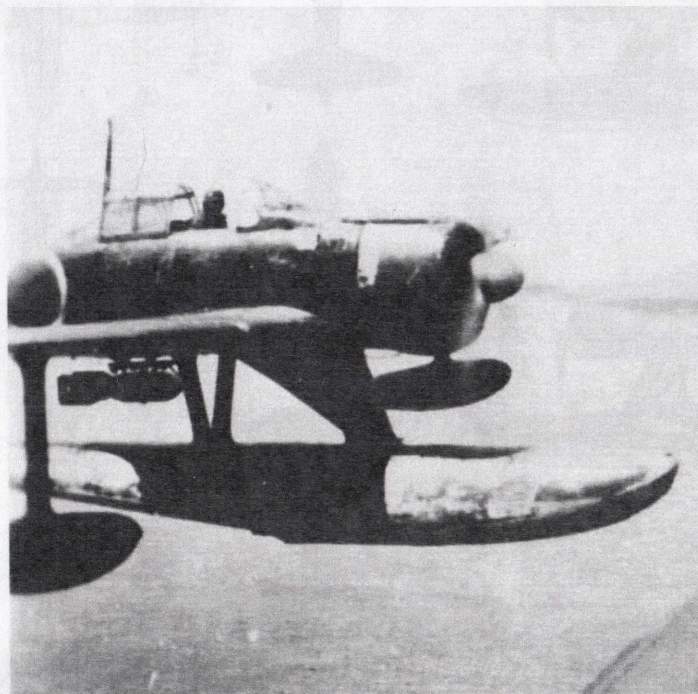

# MITSUBISHI A6M2-N RUFÉ



# MITSUBISHI A6M2-N RUFÉ



1. Apply gloss cote to model surface
2. Cut out the needed detail from the sheet.
3. Submerge the decal completely in lukewarm water for 10 sec.
4. Put the wet decal on-plotting base and allow it soften completely.
5. Place the decal together with the base paper on the model. We recommended use decal solutions(Setter, Softer)Keep paper by tweezers and remove decal carefully to model surface. In case that the decal was placed incorrectly, add water with a brush on the border of the decal.
6. If the decal is located on the right place, press it with a soft cloth to eliminate all water and air bubbles.
7. Allow the decal dry well.



Czech Republic

[http:// www.roposmodels.cz](http://www.roposmodels.cz)


[http:// www.mn-modelar.cz](http://www.mn-modelar.cz)

Email: [roposmodels@seznam.cz](mailto:roposmodels@seznam.cz)


MADE IN CZECH REPUBLIC

## Rufe over Solomon Island


Mitsubishi A6M2-N Rufe, NI-112, 802th. Kokutai,  
Solomon Islands, January 1943.

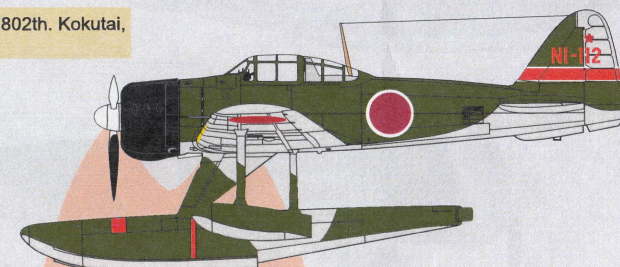


Mitsubishi A6M2-N Rufe, Y4-122, 802th. Kokutai,  
Solomon Islands, 1943.

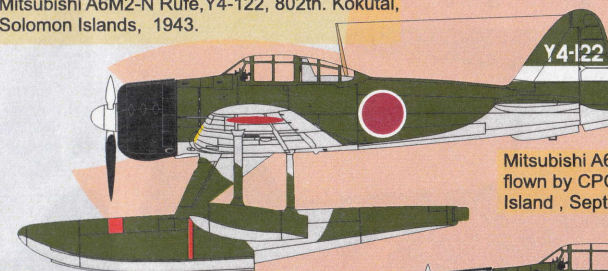

Mitsubishi A6M2-N Rufe, 934-06, 934th. Hokutai,  
flown by CPO Eitoku Matsunaga, Banda Sea/Anbon  
Island , September 1943-44.

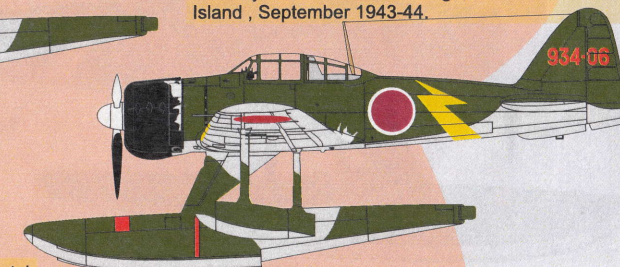

Mitsubishi A6M2-N Rufe., 802th. Kokutai,  
Solomon Islands, January 1943.












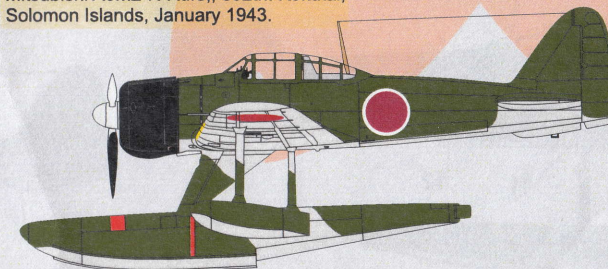


Limited series only 200 pcs!

part 5

MNFD 48019



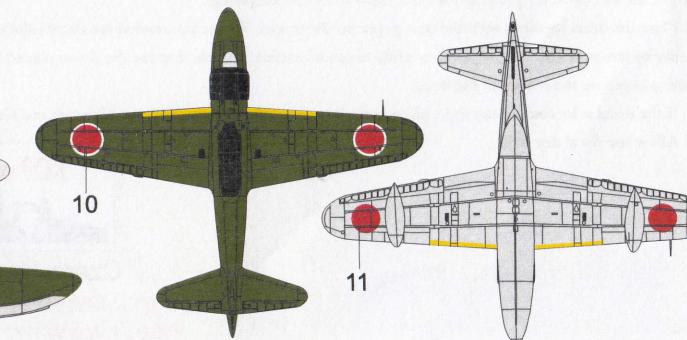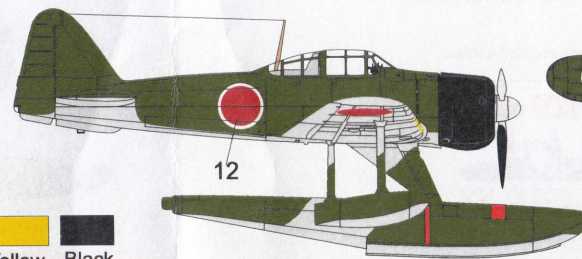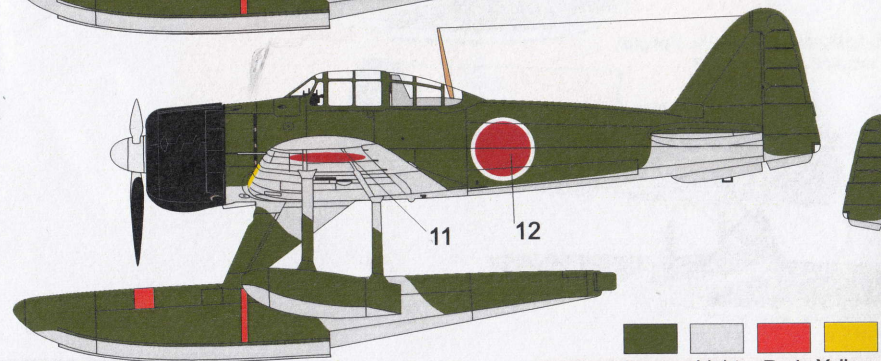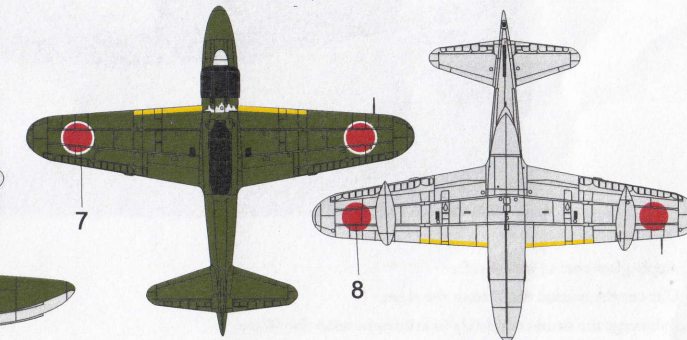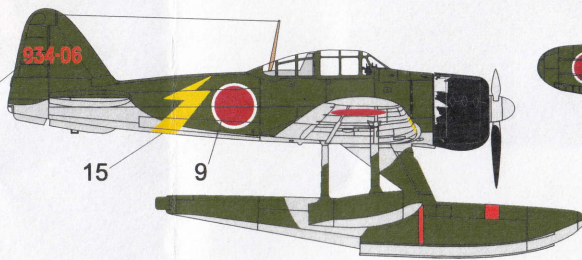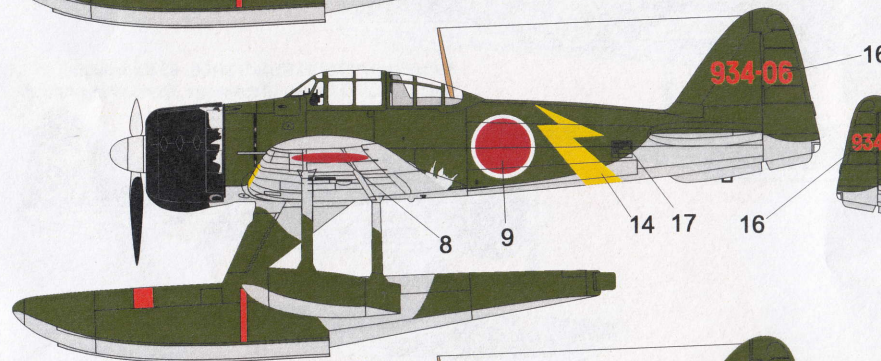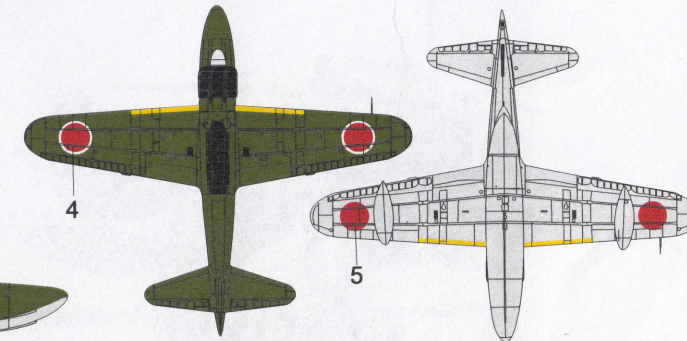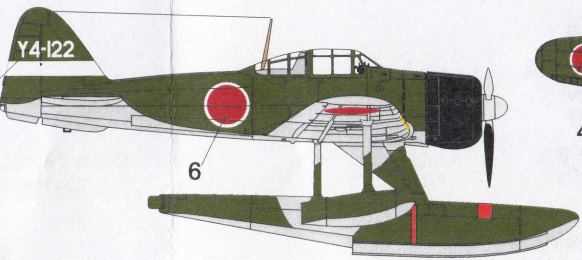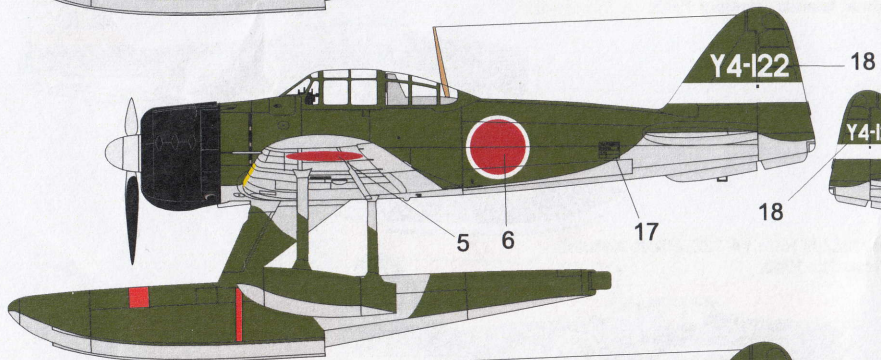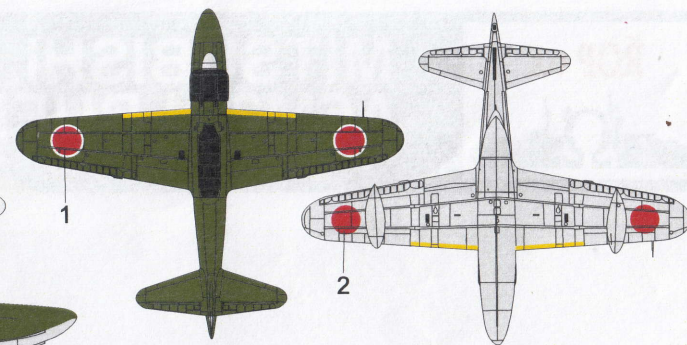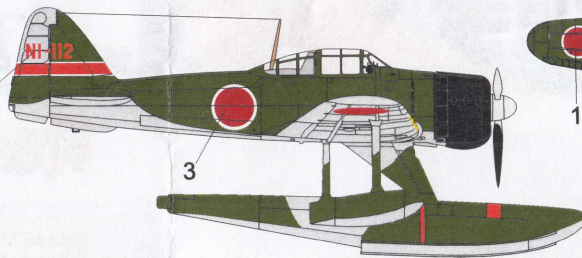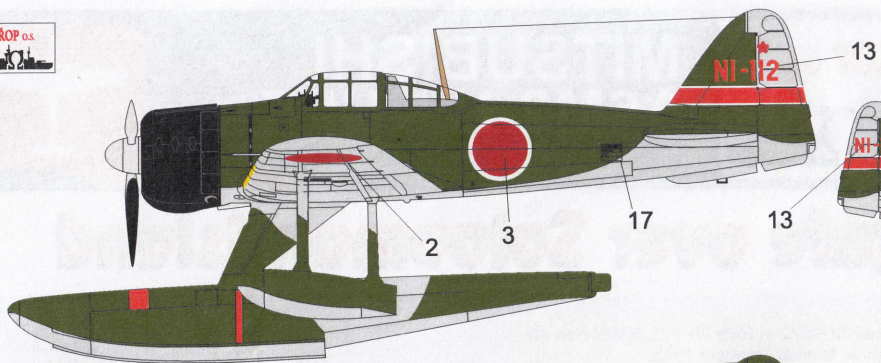

Japan Dark Green	Light Grey	Red	Yellow	Black