

HOBBY-TIME

MODEL ASSEMBLY KITS

TO DECORATE MODEL USE ENAMEL ONLY.
DO NOT USE LACQUER ON PLASTIC.

1 APPLY CEMENT ALONG EDGES OF BODY HALVES AND CAREFULLY ASSEMBLE

4 PUSH PROPELLER SHAFT THRU NOSEPIECE. HEAT AND FLATTEN END OF SHAFT. CEMENT UNIT TO BODY FRONT.

WHEN PARTS FIT TOO SNUGLY, APPLY CEMENT TO SOFTEN PLASTIC.

KIT NO. 1001

republic P-47D THUNDERBOLT

1 CEMENT COCKPIT CANOPY INTO PLACE ON BODY

7 CEMENT PILOT INTO BODY

CAREFULLY APPLY CEMENT TO BOTH JOINING SURFACES WHEN ASSEMBLING PARTS.

2 CEMENT ELEVATOR IN BODY SLOTS

3 APPLY CEMENT TO ENDS OF WING HALVES AND CEMENT INTO BODY

9 APPLY ALL DECALS


6 CEMENT ROCKETS IN PLACE UNDER WINGS

5 CEMENT LANDING GEAR WHEEL AND FLAPS IN PLACE

10 CEMENT PYLON INTO BASE LET DRY CEMENT MODEL TO PYLON TOP

USE A GOOD PLASTIC CEMENT. CARBON TETRACHLORIDE CAN BE USED AS A SUBSTITUTE.

ASSEMBLE MODEL IN SUGGESTED NUMERICAL SEQUENCE. TO COMPLETE MODEL APPLY DECALS. A THIN COAT OF VARNISH WILL SEAL DECALS TO MODEL.

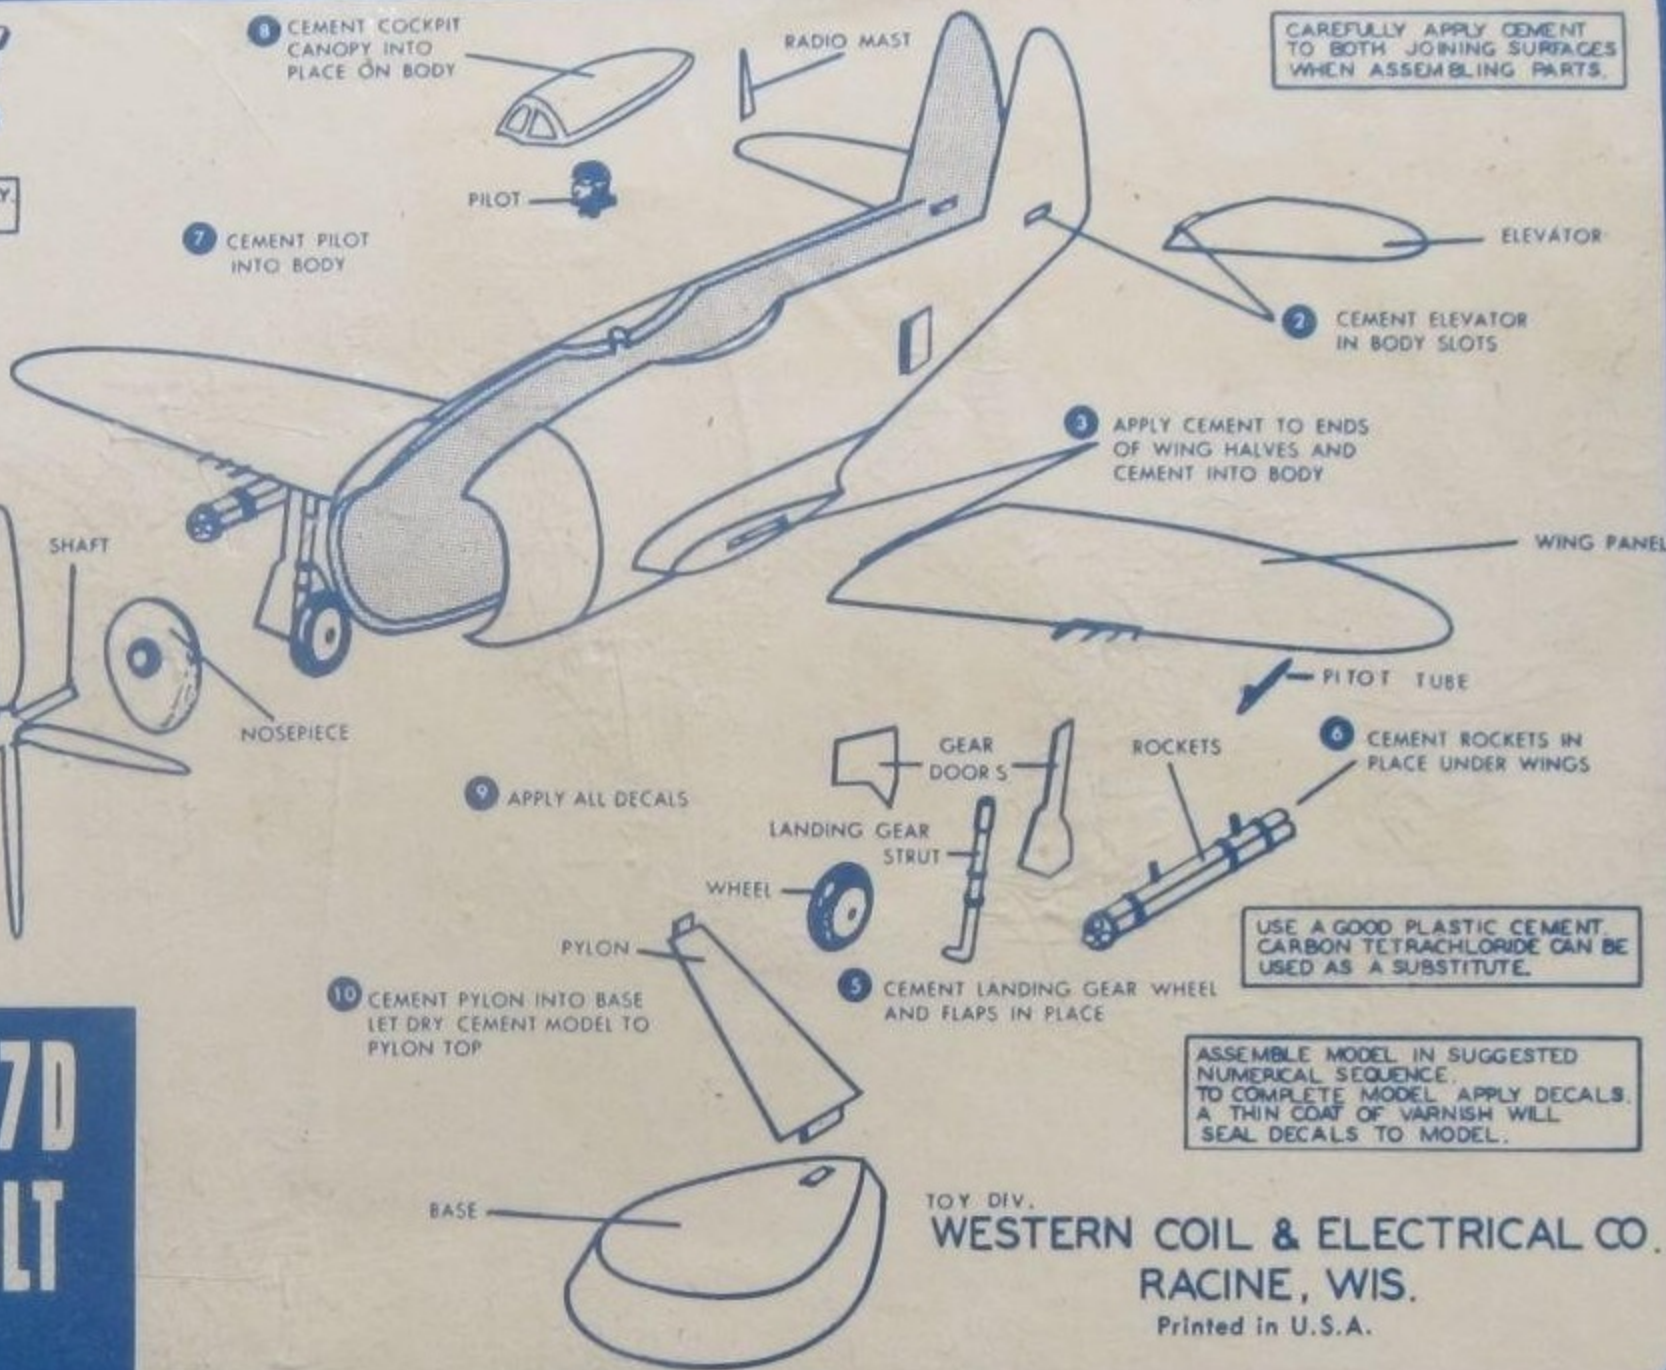

TOY DIV.
WESTERN COIL & ELECTRICAL CO.
RACINE, WIS.
Printed in U.S.A.